

## ALTRAK24

Liliowa 9  
PL-50310 Wrocław

Andrzej Brzezicki  
owner

Telefon Nr.: +44 203 608 31 62

Webseite: [www.altrak24.com](http://www.altrak24.com)  
Skype: [altrak24.com](https://www.skype.com/name/altrak24.com)  
Bankkonto Nr.: 821182300, BLZ: 87070024  
IBAN Nr.: DE82 8707 0024 0821 1823 00

## ALTRAK24



ATTENTION: IN CONCERN FOR YOUR CHILD PLEASE READ BELOW  
INSTRUCTIONS BEFORE USING OUR PRODUCTS.



**WARNING! Leaving your child in the stroller unattended may be dangerous.**

### Description and user manual:

- The stroller is intended for one child from 0 to 36 months of age (including the carrycot).
- The maximum admissible weight of a child is 15 kg.
- The maximum load of the bag is up to 2 kg.
- The maximum load of the shopping basket under the stroller seat is up to 3 kg.

### WARNING

**The seat is unsuitable for children below 6 months.**

### UNFOLDING THE STROLLER

Mount the wheels.



Attach the extension to extend the seat.



Lift the handle upwards until you hear the typical “click” sound of the locking devices.

**WARNING!**

**Prior to each use make sure that the folding mechanisms have been securely locked.**

**FOLDING THE STROLLER**

To fold the stroller, lower the backrest of the seat to the horizontal position.

Detach the extension.

Pull upwards both handle connectors on the sides at the same time and shift the handle downwards (the stroller will fold only if the handle is behind the hood).



### **SAFETY HARNESS**

The stroller is provided with a 5-point harness. The length of the particular sections of the harness is adjustable i.e. lap belt and crotch belt. Each of the belts can be adjusted separately by moving the belts in the belt loops at the main buckle.

### **WARNING!**

**Always use the harness when your child can sit up unaided.**

### **WARNING!**

**Always use the crotch belt in combination with the lap belt.**

### **BRAKE**

Press the brake lever in the bottom part of the chassis with your foot so that the brake pins lock into the cog wheel which is a fixed part of the stroller wheel. To release the brake, lift the lever upwards.



**WARNING!**

Prior to each use check if the carrycot or seat has been properly fastened to the chassis.

**REVERSING THE HANDLE**

Lift the handle lever with both hands to release the hooks. At that moment the handle can be moved by 90° by pushing it forwards.

**WARNING!**

Any load hung on the handle impairs the stroller stability.

**ADJUSTING THE BACKREST**

To adjust the seat backrest, pull the lever behind the backrest upwards, set the backrest in the required position and then release the lever.

Attention: Having adjusted the backrest, always check if it has been securely locked in place.



**HANDLE HEIGHT ADJUSTMENT**

Grasp the handle with both hands in its thicker place, where the buttons are mounted on the inner side (it is best to press the buttons with your thumbs) and adjust the upper part of the handle to the required height. Having adjusted the handle height, release the buttons.



### ADJUSTING THE FOOTREST

There are two projecting devices under the footrest on both sides. To change the footrest position, press them, at the same time adjusting the footrest position.



### BUMPER BAR AND SEAT EXTENSION

The bumper bar and the seat extension are mounted on the front of the seat, by inserting them into the armrests, after pressing the buttons. To mount the bumper bar or seat extension, insert the selected part in such a way that it is secured by the buttons, sliding out of the holes.



## USER PRECAUTIONS

The main condition of the correct stroller operation is not to exceed the permissible loads. Never rock the stroller sideways, ride up- or downstairs or on big bumps. During the period of the stroller use, check the position of the screws regularly and tighten the nuts if loose. Lubricate the wheel axles, applying a few drops of machine lubrication oil between the axle and wheel hub (do not lubricate ball bearing wheels).

## WARNINGS!

- Always activate the brake whenever you park the stroller.
- Never leave the stroller parked on a slope with a child in it.
- Never use a mattress thicker than 8 mm in the carrycot.
- Never use any extra accessories which are not integral parts of the stroller.

## USEFUL TIPS

- Never push the stroller downstairs with a child in it as the child may fall out.
- Never pull the stroller upstairs because the stroller may get damaged.
- When handling a kerb or a step, always lift the front suspension, otherwise the stroller frame may bend.
- The stroller upholstery can be cleaned with a soft sponge soaked in water with soap or mild detergents.
- Avoid prolonged exposure of the stroller to sunrays.
- Always use raincovers to protect the stroller against soaking.
- Lubricate the wheel axles regularly to protect them against excessive wear.

Datum der Reparatur-anmeldung.	Datum der Reparatur.	Die Gültigkeit wird verlängert	Die Art der Reparatur, Unterschrift und Stempel des Werksleiters.

\_\_\_\_\_  
Verkaufsdatum

\_\_\_\_\_  
Unterschrift



The proper way of blocking wheels.